



# Screen Assembly Recommendation

## MATERIALS REQUIRED:

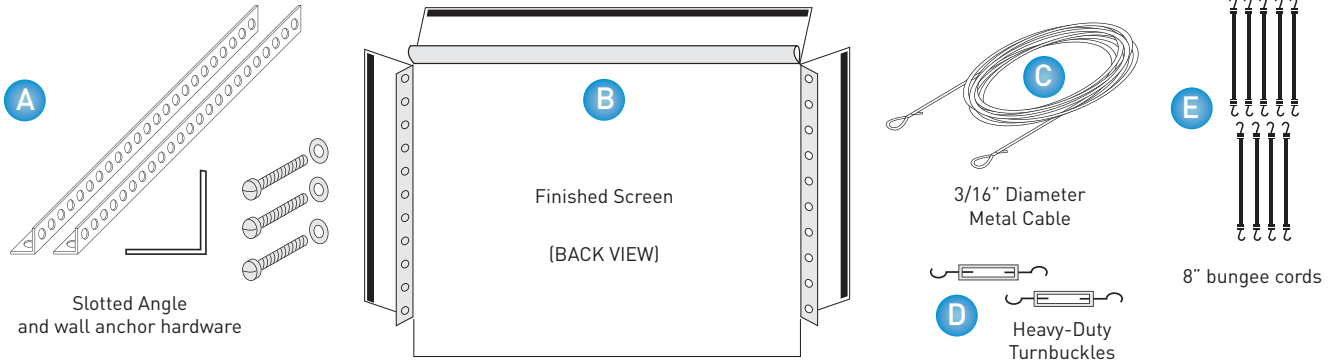


## FRAME INSTALLATION:

- 1 Attach slotted angle to sidewalls using bolts and washers or appropriate mounting hardware.

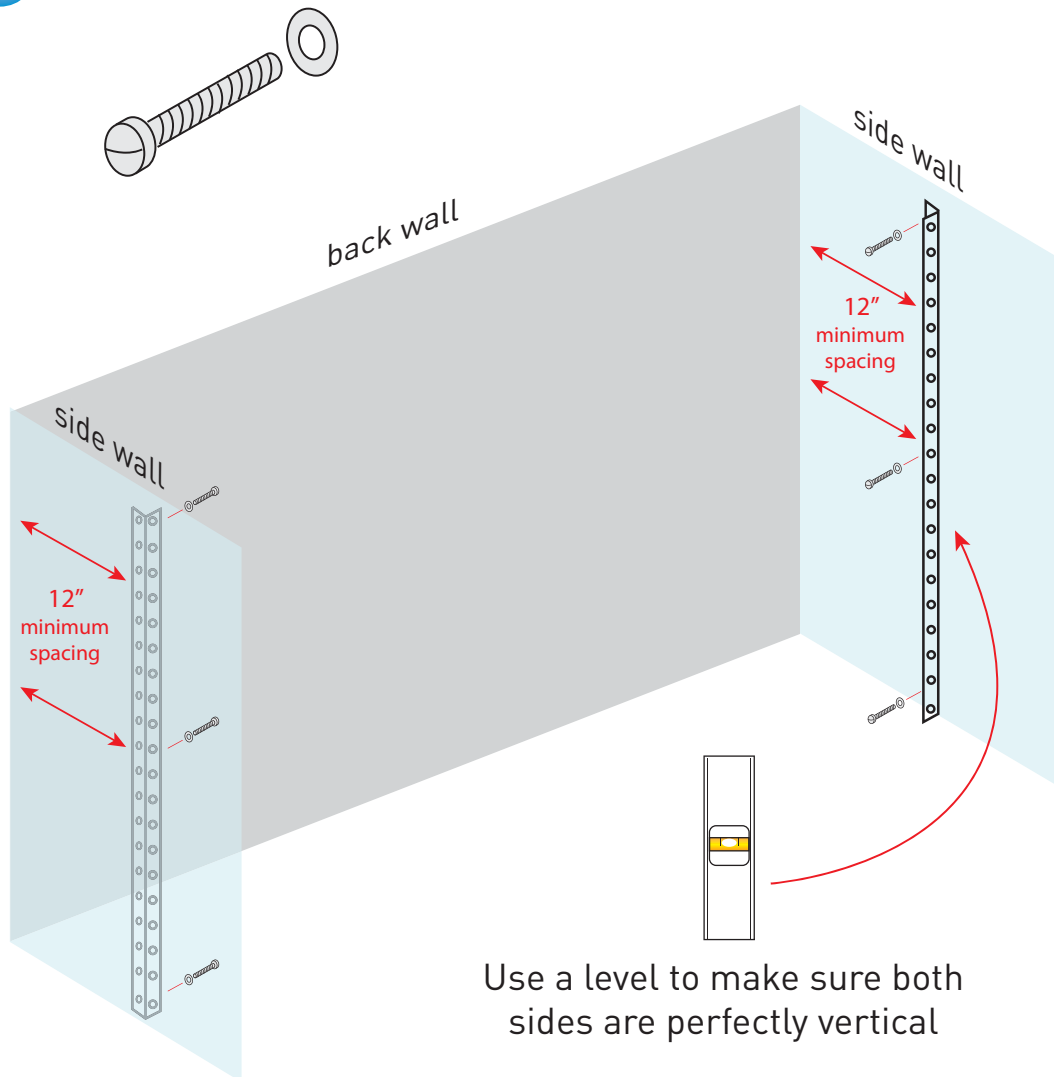


# Screen Assembly Recommendation

## 2 PREPARING THE SCREEN:


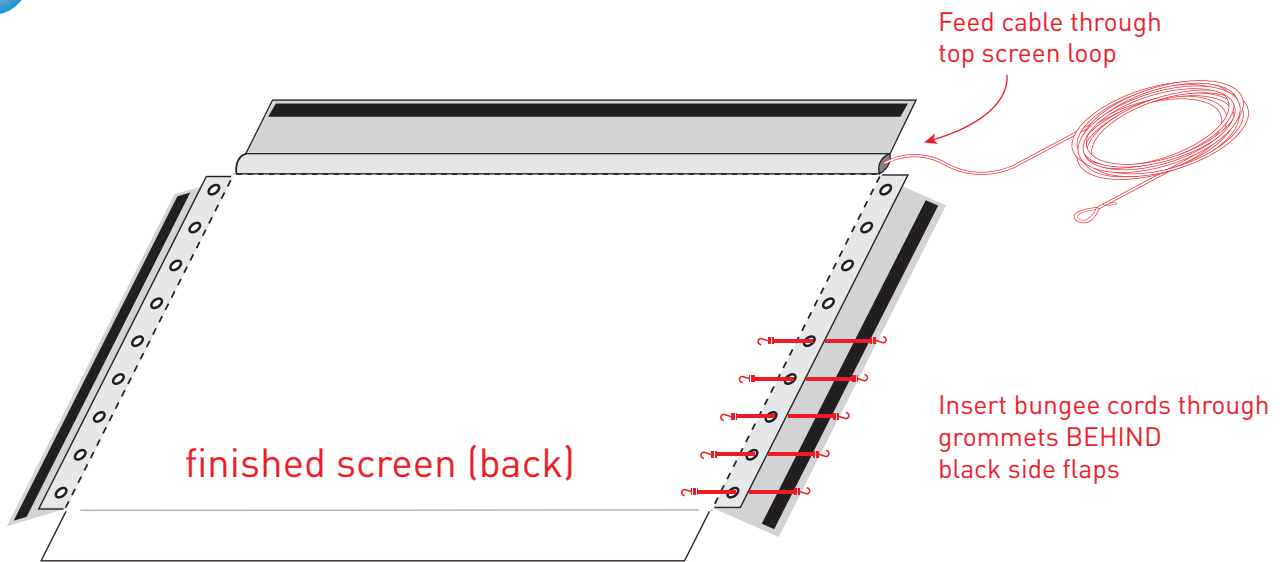


## 3 MOUNTING THE SCREEN:

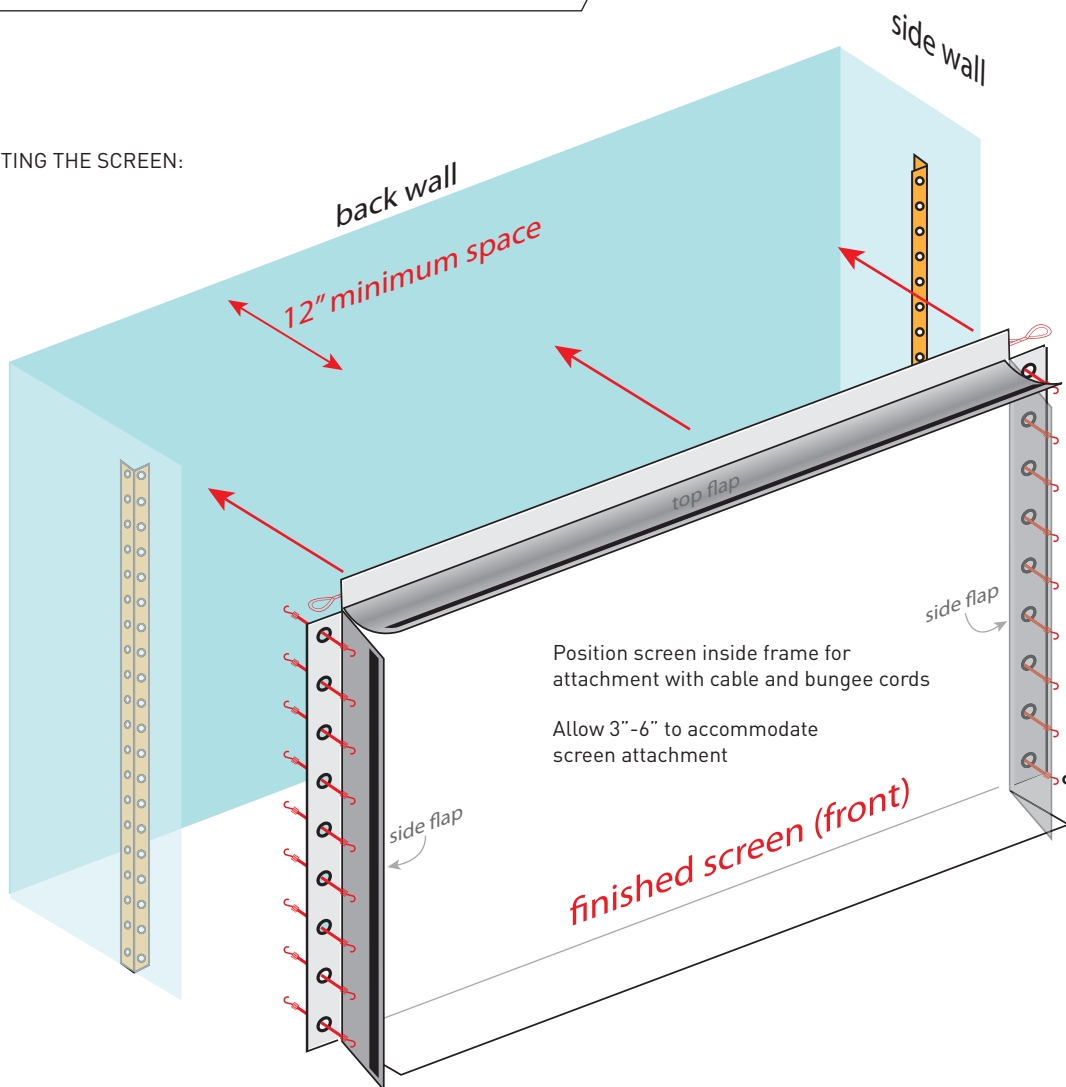


# Screen Assembly Recommendation

- 4 Secure top cable to top edge of frame with turnbuckles and tighten until cable is taut

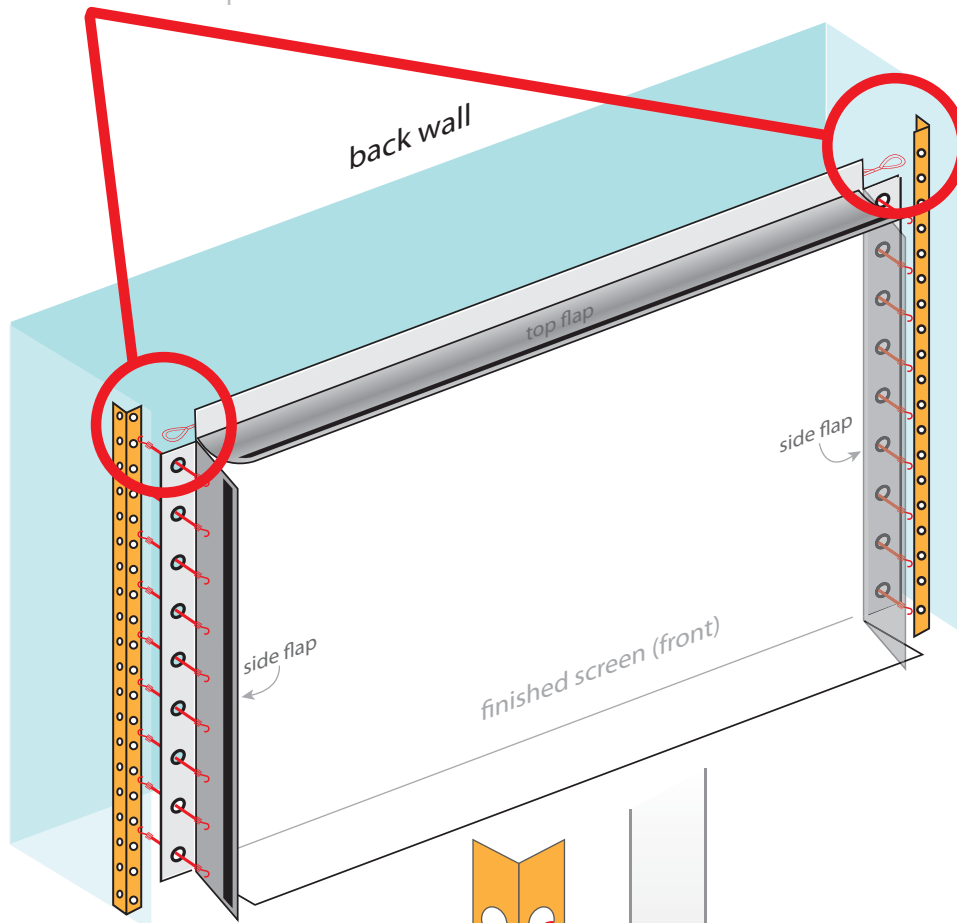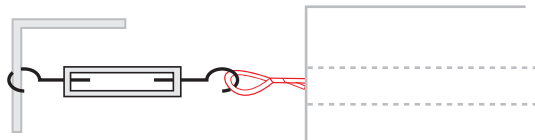

- 5 With an 8" bungee cord through each of the grommets in the screen, secure both hooked ends to openings in the slotted angle.

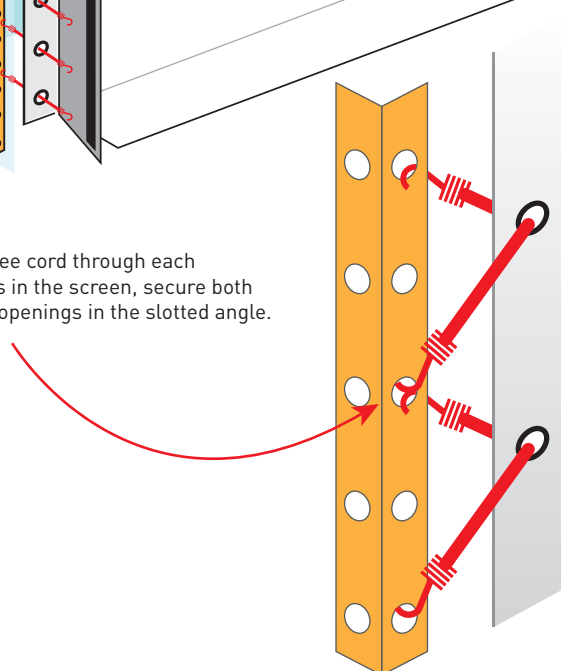

**WARNING:** The edges of the slotted angle are very sharp and can easily tear a bungee cord. Bungee cord should only make contact with slotted angle with hooked ends.